



GARLAND GAS & ELECTRIC  
CLAMSHELL GRILLS  
WITH PRODUCT RECOGNITION

**MWE3W, MWE3S, MWG3W**

## TO PROGRAM WORLD GRILL FOR MUSHROOMS

1. Press and hold the **P** button for approximately three, (3), seconds. "MENU ITEM 1" will be displayed.
2. Using **▶** scroll until you find "MUSHROOMS CLAM".
3. Press **◀**. "MUSHROOMS CLAM PRODUCT" will be displayed.
4. Press **▶** you will see "NO DISPLAY ACTIVE".
5. Press the **◀**. "NO" will flash.
6. Press **↑** to change "NO" to "YES".
7. Press the **▶** to accept change.
8. Press **▶** until you see "REMOVE IN TIME".
9. Press **◀**. Current time will flash.
10. Using **↓** change time to "104".
11. Press **▶** to accept change.
12. Press **▶** until you see "GAP SETTING".
13. Press **◀**. Current gap setting will flash.
14. Using **↑** change gap setting to "425".
15. Press **▶** to accept change.
16. Press **▶**. You will see "GAP MUL/PR START".
17. Press **◀**. Current number will flash.
18. Using **↑** change setting to "425".
19. Press **▶** to accept change.
20. Press the **P** button twice to return to normal operation.

