



**Create a HOTG 4:1 Menu Item as an Optional Clam Menu.**

042617JED

1. Press and hold the “PROGRAM” key (5 sec) or until the software version is displayed.

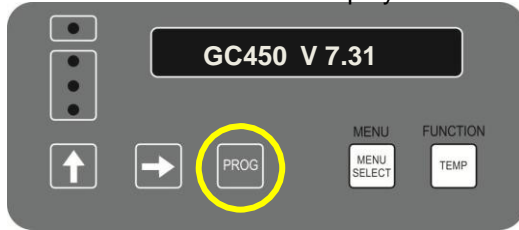


2. Press the “PROGRAM” key twice to display “SYSTEM SETUP”.

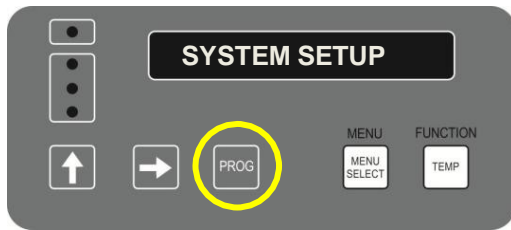

3. Press and hold the “UP ARROW” key (approximately 8 sec) until the Gap Calibration appears. **Do Not** change the gap calibration offset.




4. Press the “PROGRAM” key twice to display “MENU ITEMS”.

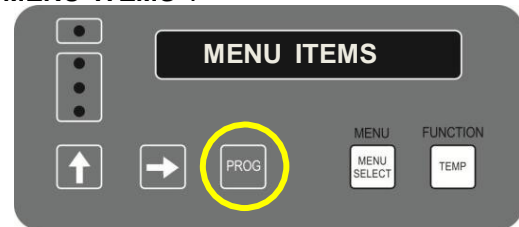

5. Press the “MENU SELECT” key until **Optional Menu(1)(2)(3) – Clam** appears. If all optional menu items are used select an unused optional menu item (example Onions) and proceed with the following programming for HOTG 4:1



6. Press the “UP ARROW” key to change to “YES”

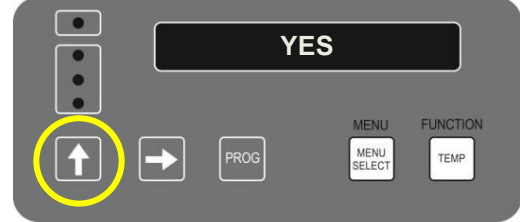

**NOTE:** Press the “TEMP” key for each level. Press the “UP ARROW” key to change the flashing number and press the “RIGHT ARROW” key to move to the next digit.


7. Press the “TEMP” key: Remove In: 80 sec




8. Press the “TEMP” key once: Alarm is displayed Press the “UP ARROW” key to change the setting (Auto or Manual) - select : ”AUTO”




9. Press the “TEMP” key: Gap Settings: .435

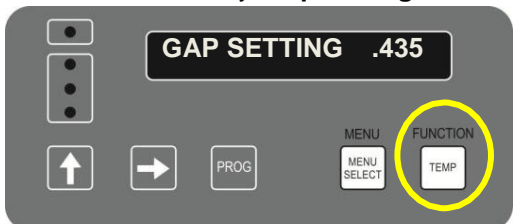


10. Press the “TEMP” key: Stage 1 Time: 20 sec.

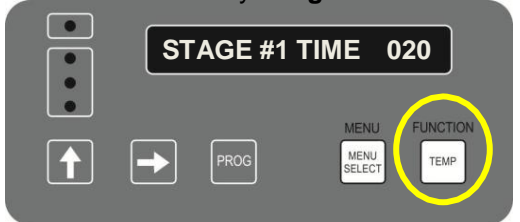


11. Press the "TEMP" key: **Stage 1 Gap: .420**

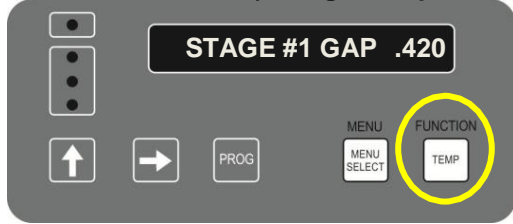


17. Press the "TEMP" key: **Toast Buns In: 030 sec.**

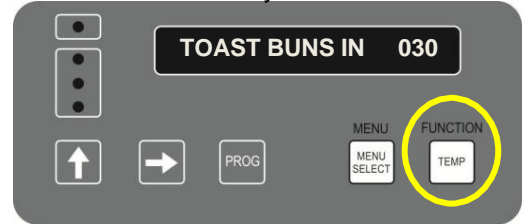


12. Press the "TEMP" key: **Stage 2 Time: 000 sec.**

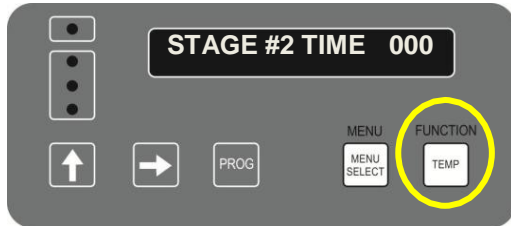


18. Press the "TEMP" key once: **Alarm** is displayed. Press the "UP ARROW" key to change the setting (Auto or Manual) - select: "AUTO"

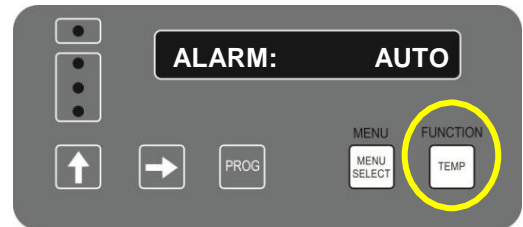


13. Press the "TEMP" key: **Stage 2 Gap: 000**

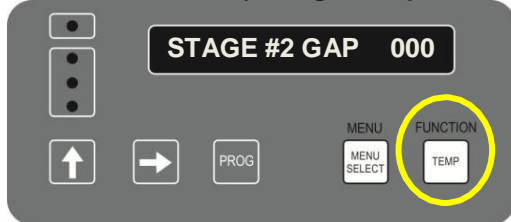


19. Press the "TEMP" key: **TOP TEMP: 425 F**

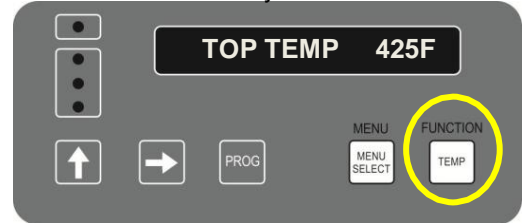


14. Press the "TEMP" key: **Stage 3 Time: 000 sec.**

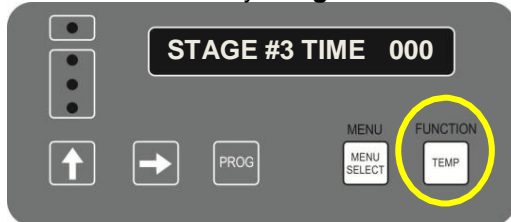

20. Press the "TEMP" key: **BOTTOM TEMP: 365 F**

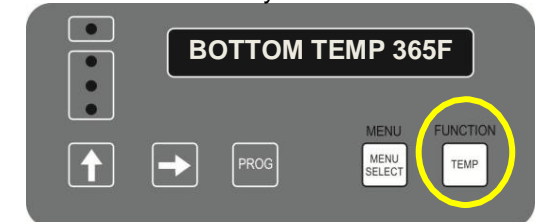

15. Press the "TEMP" key: **Stage 3 Gap: 000**

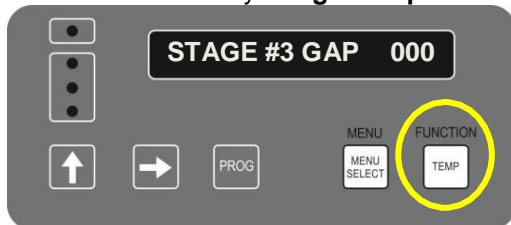

21. Press the "TEMP" key to display "OPTIONAL MENU CLAM". To Name the New Menu Item



16. Press the "TEMP" key: **Must Remove in: 000**



22. To Name the New Menu Item.

**Press** the “**UP ARROW**” key to change the value of the flashing digit.

**Press** the “**RIGHT ARROW**” to advance the cursor to the right for changing its value.



23. Press the “**TEMP**” key multiple times to scroll through the menu to verify the changes you made are correct

***Return to Main Menu***

21. Press the “**PROGRAM**” key once.

22. Press the “**RIGHT ARROW**” key once.

***THE COOK TIME IS A “START POINT” FOR COOKING. AFTER THE PROGRAMMING CHANGES ARE MADE, COMPLETE A “BEEF INTEGRITY” CHECK TO SET THE CORRECT COOK TIME FOR THE HOTG 4:1 PRODUCT.***