












## **STEPS FOR PROGRAMMING GRILL RECOVERY CLEANING**

**For use with Garland models: MWE3W, MWE3S, MWG3W, MWE3W-1, MWE3S-1, MWG3W-1, MWE2W, MWG2S, MWG2W, MWE1W, MWE1S, MWG1W, MWE2W-1, MWG2S-1, MWG2W-1, MWE1W-1, MWE1S-1, MWG1W-1**


The following procedures will be used for all 1, 2 and 3 Platen Garland "Product Recognition" Clam Grills WITH THE CONTROL PANEL SHOW BELOW. These procedures should be followed in sequence.




1. PRESS and HOLD the  button for 3 seconds. Controller will display previously selected menu item and item number.
2. PRESS the   button until "Opt menu #-CLAM" is displayed.
3. PRESS the  button. The controller will display "PRODUCT".
4. PRESS and HOLD the  button. The currently selected menu item name will begin to flash.
5. To spell out the "RECOVERY" menu item:
  - a. Use the  or  arrow buttons to change the first displayed character to begin naming this program (e.g. "R").
  - b. PRESS the  or  to scroll to the previous or next character position

c. PRESS the  button to save this menu name.


6. PRESS the  button. "Display active" will be displayed.



7. PRESS the  button. "NO" will begin to flash.

8. PRESS the  button. "NO" will now change to "YES".


9. PRESS the  button to save the new setting.


10. PRESS the  button. "GRILL SETPT" will be displayed.



11. PRESS the  button. The temperature will begin to flash.

12. Using the  or  button, change the temperature set point to **285**.

13. PRESS the  button to save the new temperature setting.


14. PRESS the  button. "PLATSETPT" will be displayed.

15. PRESS the  button. The temperature will begin to flash.








16. Using the  or  button, change the temperature set point to **285**.

17. PRESS the  button to save the new temperature setting.

18. PRESS the  button until "REMOVE IN TIME" is displayed.

19. PRESS the  button. The seconds will begin to flash.

20. Using the  or  button, change the seconds to **999**.

21. PRESS the  button to save the new time.
22. PRESS the  button until "GAP SETTING" is displayed.
23. PRESS the  button. The display will begin to flash.
24. Using the  or  button, change the display to **090**.
25. PRESS the  button to save the new gap.
26. PRESS the  button 2X to exit and return to normal operating mode.

**When selecting "RECOVERY" if above 285 degF "TOO HOT" will be displayed. When the temperature is correct "RECOVERY" will remain displayed. You are now ready to follow the RECOVERY PROCEDURE.**

