



Integrity, Commitment to Stakeholders, and Passion for Excellence.

Garland





STEPS FOR PROGRAMMING GRILL RECOVERY CLEANING


For use with Garland models: MWE9501, MWG9501, MWE9801

The following procedures will be used for all 2 Platen Garland Clam Grills WITH THE CONTROL PANEL SHOW BELOW. These procedures should be followed in sequence.





1. PRESS and HOLD the  button for 5 seconds until the software version is displayed and flashing.

















2. PRESS the  button twice (2x) to display "SYSTEM SET UP"


3. PRESS and HOLD the  button for (10) seconds, "GAP CALIBRATION" will be displayed.


4. PRESS the  button twice (2X) to display "MENU ITEMS".

5. PRESS the  button to scroll through menus until "OPTIONAL MENU CLAM" is displayed.

6. PRESS the  button to display Yes/No selection, select "Y" (YES) to display this menu item.

7. PRESS the  button to display "REMOVE IN XXX".
8. PRESS the  button to display the number "9".
9. PRESS the  button to go to the next blinking number and repeat STEPS 8 and 9 until the display reads "999".
10. PRESS the  button to display "ALARM". PRESS the  to select "AUTO"
11. PRESS the  button to display "GAP SETTING"
12. PRESS the  button to display the number "0". Press the  to go to the next blinking number and repeat STEPS until the display reads "090".
13. Press the  button consecutive times to display the STAGE 1,2 3 Time and STAGE 1,2,3 Gap. All these SETTINGS should be "000"
14. PRESS the  button to scroll through menus until "TOP TEMP" is displayed.
15. PRESS the  button to display the number "2". PRESS the  to go to the next blinking number and repeat STEPS until the display reads "285".
16. PRESS the  button and "BOTTOM TEMP" is displayed.
17. PRESS the  button to display the number "2". PRESS the  to go to the next blinking number and repeat STEPS until the display reads "285".
18. PRESS the  button and scroll until "OPTIONAL MENU CLAM" is displayed with the first letter flashing.

19. PRESS the  button so that the character flashing is a blank space or the letter "R";

20. PRESS the  to go to the next character on the right. Repeat these steps until you have spelled the word "RECOVERY" and erase any unneeded characters.

21. PRESS the  button and then the  button to return to normal operation.

When selecting "RECOVERY" if above 285 degF "TOO HOT" will be displayed. When the temperature is correct "RECOVERY" will remain displayed. You are now ready to follow the RECOVERY PROCEDURE.

