



## CONTROL PROGRAMMING

FOR USE WITH MODELS MWE3W | MWG3W & MWE2W | MWG2W

The following procedures should be followed in sequence. If you have trouble following the steps listed below, you can consult your operations manual. A downloadable copy of the Operations manual containing additional programming instruction can be found at <https://clamshell.garland-group.com/literature.asp>.

1. **Enter Programming** - Enter the program mode.
2. **Remove existing menu items from library** - Remove Folded Eggs & Round Eggs (FLAT) from library, these items will be reprogrammed as CLAM menu items.
3. **Change settings for the remaining menu items in library**
  - Change existing menu items to the new programmed settings.
4. **Program new menu items into library** - Reprogram Egg products into CLAM menu items.
5. **Disable Multi Gap Cooking** - Not used anymore.

### Enter Programming

1. PRESS and HOLD the **P** button for approximately 3 seconds. Controller will display previously selected menu item and its corresponding item number.




### Remove menu items from menu library

2. PRESS the **■** button until "FOLDED EGGS FLAT" is displayed.



3. PRESS the **■** button. Controller will display "PRODUCT"

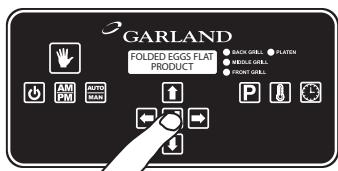

4. PRESS the **■** button until "DISPLAY ACTIVE AM" is displayed.



5. PRESS the **■** button. The current setting will begin to flash.




6. Using the **↑** or **↓** button, the flashing "AM" to "NO"



7. PRESS the **■** button to save the new setting.




8. PRESS the **P** button. Controller will display previously selected menu item and its corresponding item number.

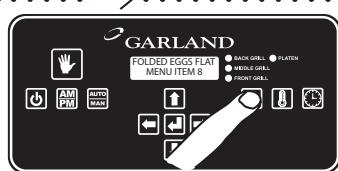

9. PRESS the **■** button until "ROUND EGGS FLAT" is displayed.



10. PRESS the **■** button. Controller will display "PRODUCT"

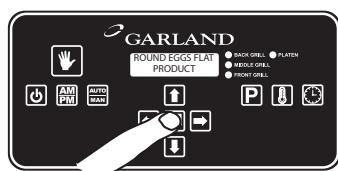

11. PRESS the **■** button until "DISPLAY ACTIVE AM" is displayed.



12. PRESS the **■** button. The current setting will begin to flash.



13. Using the **↑** or **↓** button, the flashing "AM" to "NO"





## CONTROL PROGRAMMING

FOR USE WITH MODELS MWE3W | MWG3W & MWE2W | MWG2W

14. PRESS the **P** button to save the new setting.



23. PRESS the **P** button. The current setting will begin to flash.



15. PRESS the **P** button. Controller will display previously selected menu item and its corresponding item number.



24. Using the **↑** or **↓** button, change the old setting to the new setting.




**Change settings for current menu items 10:1, 4:1, Sausage, Grilled Chicken, Bacon, Angus, Mushrooms & McRib.**

16. PRESS the **↑** or **↓** button until "10:1 CLAM" is displayed.




25. PRESS the **P** button to save the new setting.

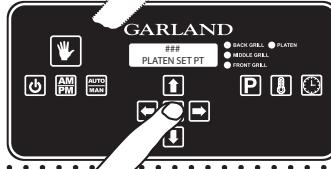


17. PRESS the **P** button. Controller will display "PRODUCT"



26. PRESS the **→** button until "REMOVE IN TIME" is displayed.

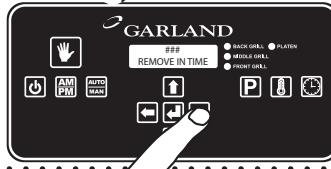

18. PRESS the **P** button until "GRILL SP" is displayed.

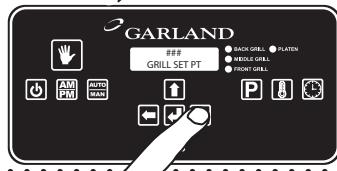

27. PRESS the **P** button. The current setting will begin to flash.



19. PRESS the **P** button. The current setting will begin to flash.



28. Using the **↑** or **↓** button, change the old setting to the new setting.




20. Using the **↑** or **↓** button, change the old setting to the new setting.



29. PRESS the **P** button to save the new setting.



21. PRESS the **P** button to save the new setting.

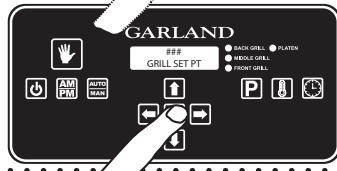

30. PRESS the **→** button until "GAP SETTING" is displayed.



22. PRESS the **P** button until "PLATEN SP" is displayed.



31. PRESS the **P** button. The current setting will begin to flash.





## CONTROL PROGRAMMING

FOR USE WITH MODELS MWE3W | MWG3W & MWE2W | MWG2W

32. Using the **↑** or **↓** button, change the old setting to the new setting.



33. PRESS the **█** button to save the new setting.



34. Repeat steps ## - ## for product menu 4:1, Sausage, Bacon, Angus, Mushroom & McRib. Once complete, go to step 24.

### Add new menu items required (Round Eggs, Folded Eggs)

35. PRESS the **█** or **█** button until "OPT. MENU # CLAM" appears in the display.



36. PRESS the **█** button. Controller will display "PRODUCT"



37. PRESS and HOLD the **█** button. The characters will begin to flash.



38. Using the UP, DOWN, RIGHT, & LEFT arrow buttons, change the "OPT MENU #" to "ROUND EGGS - CLAM".



39. PRESS the **█** button to save the new setting.



40. PRESS the **█** button until "DISPLAY ACTIVE" is displayed.



41. PRESS the **█** button. The current setting will begin to flash.



42. Using the **↑** or **↓** button, change the flashing "NO" to "AM".



43. PRESS the **█** button to save the new setting.



44. PRESS the **█** button until "GRILL SP" is displayed.



45. PRESS the **█** button. The current setting will begin to flash.



46. Using the **↑** or **↓** button, change the old setting to the new setting.



47. PRESS the **█** button to save the new setting.



48. PRESS the **█** button until "PLATEN SP" is displayed.



49. PRESS the **█** button. The current setting will begin to flash.





## CONTROL PROGRAMMING

FOR USE WITH MODELS MWE3W | MWG3W & MWE2W | MWG2W



50. Using the **↑** or **↓** button, change the old setting to the new setting.



51. PRESS the **◀** button to save the new setting.



52. PRESS the **▶** button until "REMOVE IN TIME" is displayed.



53. PRESS the **█** button. The current setting will begin to flash.



54. Using the **↑** or **↓** button, change the old setting to the new setting.



55. PRESS the **◀** button to save the new setting.



56. PRESS the **█** button until "GAP SETTING" is displayed.



57. PRESS the **◀** button. The current setting will begin to flash.



58. Using the **↑** or **↓** button, change the old setting to the new setting.



59. PRESS the **█** button to save the new setting.



60. PRESS the **█** or **█** button until "OPT. MENU # CLAM" appears in the display.



61. PRESS the **█** button. Controller will display "PRODUCT"



62. PRESS and HOLD the **█** button. The characters will begin to flash.



63. Using the UP, DOWN, RIGHT, & LEFT arrow buttons, change the "OPT MENU #" to "FOLDED EGGS - CLAM".




64. PRESS the **█** button to save the new setting.



65. PRESS the **█** button until "DISPLAY ACTIVE" is displayed.



66. PRESS the **█** button. The current setting will begin to flash.

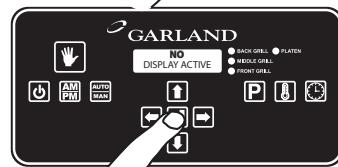

67. Using the **↑** or **↓** button, change the flashing "NO" to "AM".





## CONTROL PROGRAMMING

FOR USE WITH MODELS MWE3W | MWG3W & MWE2W | MWG2W

68. PRESS the button to save the new setting.



69. PRESS the button until "GRILL SP" is displayed.



70. PRESS the button. The current setting will begin to flash.



71. Using the or button, change the old setting to the new setting.



72. PRESS the button to save the new setting.



73. PRESS the button until "PLATEN SP" is displayed.



74. PRESS the button. The current setting will begin to flash.



75. Using the or button, change the old setting to the new setting.



76. PRESS the button to save the new setting.



77. PRESS the button until "REMOVE IN TIME" is displayed.



78. PRESS the button. The current setting will begin to flash.



79. Using the or button, change the old setting to the new setting.



80. PRESS the button to save the new setting.



81. PRESS the button until "GAP SETTING" is displayed.



82. PRESS the button. The current setting will begin to flash.



83. Using the or button, change the old setting to the new setting.



84. PRESS the button to save the new setting.



### Disable Multi Gap Cooking

85. PRESS the button.



## CONTROL PROGRAMMING

FOR USE WITH MODELS MWE3W | MWG3W & MWE2W | MWG2W


86. PRESS the AND buttons TOGETHER. "CONFIGURE" will appear in the display



87. PRESS the button. "Setup" will appear in the display



88. PRESS the button. The control will display the temperature units.

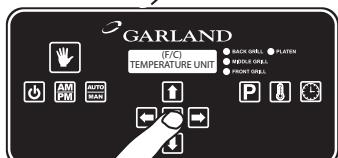

89. PRESS the button until "MULTI GAP - (YES/NO)" is displayed. If control displays "NO", move to step 93.



90. PRESS the button. The current setting will begin to flash.



91. Using the or button, change the flashing "YES" to a "NO".



92. PRESS the button to save the new setting.



93. PRESS THE 2X to exit the program mode. The control will display "SETUP" and then the originally selected mode.



\*\*\* The following settings are the **NEW** settings. All previous settings should be changed to the following settings. \*\*\*

### Breakfast Menu

Product	Set temp		Gap Setting	Start Remove Time
	Upper	Lower		
Sausage	425°F	375°F	.350	87
Roasted Bacon	425°F	375°F	.265	60 (Gas) 70 (Elec)
Bkfst Steak	425°F	375°F	.425	110
Round Eggs	300°F	285°F	.625	155
Folded Eggs	300°F	285°F	.625	120

### Lunch Menu

10:1 Clam	425°F	375°F	.235	38
4:1 Clam	425°F	375°F	.425	118
Grilled Chicken	425°F	375°F		220 (Turn) 470 (Remove)
Angus	425°F	375°F	.534	176 (2 platen) 179 (3 platen)
Mushrooms	425°F	375°F	.425	104
McRib	425°F	375°F	.530	170