




NEW MULTI-STAGE PROGRAMMING INSTRUCTIONS **FOR "CHICKEN BURGER"** (version 1 81715)

For use with Garland models: MWE3W, MWE3S, MWG3W, MWE3W-1, MWE3S-1, MWG3W-1, MWE2W, MWG2S, MWG2W, MWE1W, MWE1S, MWG1W, MWE2W-1, MWG2S-1, MWG2W-1, MWE1W-1, MWE1S-1, MWG1W-1

The following procedures will be used for all 1, 2 and 3 Platen Garland "Product Recognition" Clam Grills cooking with Lower Release Sheets. These procedures should be followed in sequence.

Overview


- 1- **Enter Programming Mode:** Enter McDonald's AM/PM Menu program mode.
- 2- **Adding New Menu Item and Change Menu Settings:** These steps show how to change Grill Set Point / Remove In Time / Gap Setting and Multi Stage Settings.

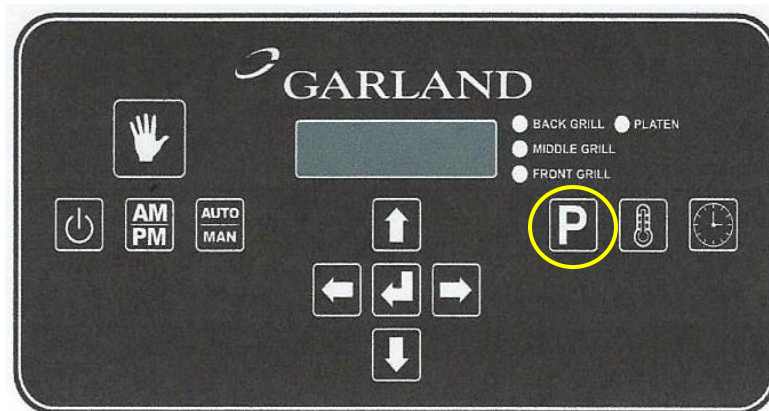

Detail Procedures: Add New Menu Item


1- Enter Programming Mode

- 1.1 **PRESS** and **HOLD** the **P** button for approximately three (3) seconds. Controller will display previously selected menu item and its corresponding item number.

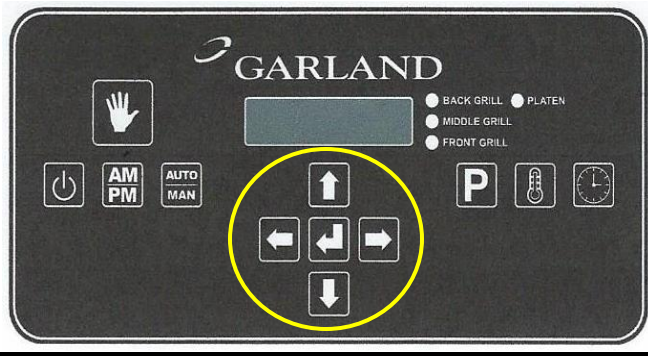


2- Setting Up New Menu Item

- 2-1 Press **←** or **→** button until **"OPT MENU # CLAM"** is displayed.
- 2-2 Press the **↵** button. Controller will display **"PRODUCT"**.
- 2-3 Press and Hold the **↵** button. The currently select menu item name will begin to flash.
- 2-4 To Spell out the product name: **CHICK BURGER CLM**
 - a. Use the **↑** or **↓** to scroll through the character library.
 - b. Press **←** or **→** to scroll right or left.
 - c. Press the **↵** button to save the new menu name.
- 2-5 Press the **→** button. **"Display Active"** will be displayed.
- 2-6 Press the **↵** button. **"NO"** will begin to flash.
- 2-7 Press the **↑** button. **"NO"** will change to **"YES"**.
- 2-8 Press the **↵** button to save the setting.
- 2-9 Press the **→** button. **"GRILL SETPT"** will be displayed.
- 2-10 Press the **↵** button. The temperature will begin to flash.
- 2-11 Using the **↑** or **↓** button, change the current setting to **375**.
- 2-12 Press the **↵** button to save the new setting.
- 2-13 Press the **→** button. **"PLAT SETPT"** will be displayed.
- 2-14 Press the **↵** button. The temperature will begin to flash.
- 2-15 Using the **↑** or **↓** button, change the current setting to **425**.
- 2-16 Press the **↵** button to save the new setting.
- 2-17 Press the **→** button until **"INSTANT ON TIME"** is displayed.
- 2-18 Press the **↵** button. The Current setting will begin to flash.
- 2-19 Using the **↑** or **↓** button, change the current setting to **30 sec**.
- 2-20 Press the **↵** button to save the new setting.

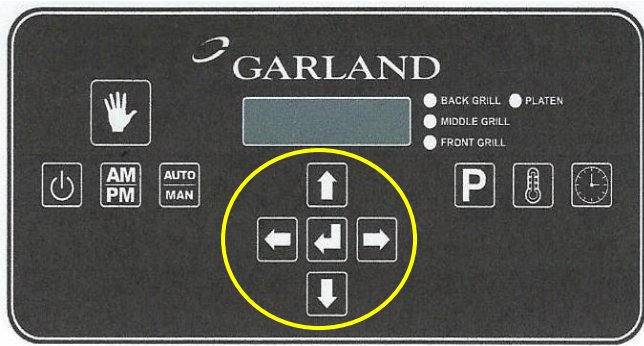

- 2-21 Press the ➡ button until **"REMOVE IN TIME"** is displayed.
- 2-22 Press the ↩ button. The Current setting will begin to flash.
- 2-23 Using the ⬆ or ⬇ button, change the current setting to **190 sec** start time.
- 2-24 Press the ↩ button to save the new setting.
- 2-25 Press the ➡ button until **"MULTI STAGE 1 TIME"** is displayed
- 2-26 Press the ↩ button. The Current setting will begin to flash.
- 2-27 Using the ⬆ or ⬇ button, change the current setting to **20 sec.**
- 2-28 Press the ↩ button to save the new setting.
- 2-29 Press the ➡ button until **"MULTI STAGE 2 TIME"** is displayed

- 2-30 Press the ↩ button. The Current setting will begin to flash.
- 2-31 Using the ⬆ or ⬇ button, change the current setting to **10 sec.**
- 2-32 Press the ↩ button to save the new setting.
- 2-33 Press the ➡ button until **"GAP MULTI/PR START"** is displayed.
- 2-34 Press the ↩ button. The Current setting will begin to flash.
- 2-35 Using the ⬆ or ⬇ button, change the current setting to **625**
- 2-36 Press the ↩ button to save the new setting.
- 2-37 Press the ➡ button until **"GAP MULTI STAGE 1"** is displayed.
- 2-38 Press the ↩ button. The Current setting will begin to flash.
- 2-39 Using the ⬆ or ⬇ button, change the current setting to **395**
- 2-40 Press the ↩ button to save the new setting.

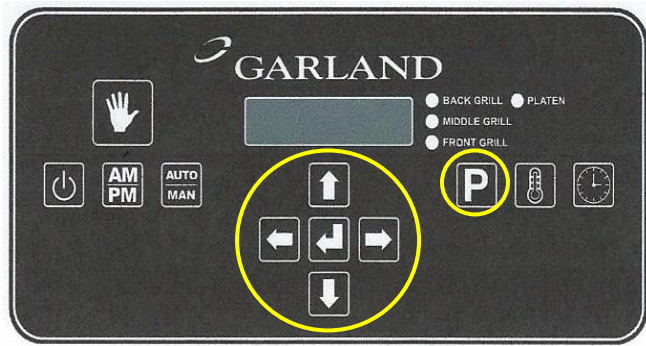

- 2-41 Press the ➡ button until **"GAP MULTI STAGE 2"** is displayed.
- 2-42 Press the ↙ button. The Current setting will begin to flash.
- 2-43 Using the ⬆ or ⬇ button, change the current setting to **460**

- 2-44 Press the ↙ button to save the new setting.
- 2-45 Press the ➡ button multiple times to **"SCROLL"** through all menu settings to verify that all your changes are correct.
- 2-46 Press the **P** button **TWICE** to exit and return to the normal operating mode.

Ver 1 81715JED